

ULTRALITE Telescoping Gantry Crane



Installation, Operation, & Maintenance Manual

ULTRALITE
SERIES



Installation Safety	2
Pre-Installation Checklist & Capacity info	3
System Capacity information	4
Pre-assembly & Installation	5
Installation of Electrification	6
Torque Specifications	7
Crane Operator Basic Instructions	8
Raising/Lowering Telescoping Gantry Beam.....	9
General Safety & Daily Inspection	10
Parts Dept & Drawings Available	12
Warranty	13
Periodic Inspections	15


Date purchased_____

SN_____

Order Number_____

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.

ULTRALITE Telescoping Gantry Crane

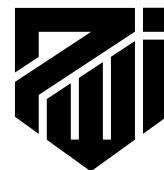

Before you begin. Read the instructions carefully, from beginning to end, and follow the proper sequence.

Thank you for purchasing a PWI crane! We have been building cranes for years and our experience and knowledge should give you peace of mind. We too use cranes in our manufacturing processes. From design & engineering, all the way to installation of our crane systems, our experience and passion for quality crane systems is shown in our products. We hope you find the installation ease and use of our PWI products to be among the best items you have purchased.

Thank you from the entire staff at PWI.

General Safety:

- ☐ Safety comes first when unloading and assembling your crane system. Many of the components are heavy and require lifting equipment to move and set them in place. Make sure the equipment you choose to support and lift each piece is capable of the task with extra capacity to do the job. Do not end up in a dangerous situation.
- ☐ Start with checking any lifting fixtures/tools for damage or wear that could lead to severe injury or death.
- ☐ This manual assumes that you have considered the condition of the surfaces that this gantry crane will be rolling on. This gantry crane is designed for flat hard level surfaces only. Do not use this gantry crane in gravel, soft material, or areas where stability of the frame could potentially be a problem. The potential for instability when the load is raised requires a well thought out plan and consideration of the soundness of the floor structure.
- ☐ Please call PWI if you are unsure of the slab/foundation requirements for your crane system.
- ☐ Obstructions. Whether on the floor or overhead, be aware of the workspace and realize that anything at floor level and anything above can be a potential obstruction to your gantry crane. **DO NOT LET THE GANTRY CRANE RUN OVER OR INTO OBSTRUCTIONS IN THE WORK AREA.**



WARNING

There must be 3" minimum clearance to any obstruction above the unit.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



Pre-Installation Checklist:

- ☐ Check your shipment for the correct components and hardware. Your shipment should include shipping sheets that were checked off by our team.
- ☐ Check your shipment for drawings for layout and installation of components.
- ☐ Clear the area as much as possible of items that could be damaged or create hazards during the installation. When assembling near electrical panels be aware of any regulations regarding perimeters required around those objects.
- ☐ Forklift or suitable lifting equipment.
- ☐ Should you have any technical questions, or feel you have defective components or missing items, call us immediately. We will be glad to assist you.

Tools Needed:

- | | |
|--|--|
| <input type="checkbox"/> Proper PPE: | <input type="checkbox"/> Hammer |
| <input type="checkbox"/> Forklift | <input type="checkbox"/> Torque Wrench |
| <input type="checkbox"/> Ladder/Man Lift | <input type="checkbox"/> Wrench Set |
| <input type="checkbox"/> Nylon Lifting Sling | <input type="checkbox"/> Laser Level |
| <input type="checkbox"/> Marker | <input type="checkbox"/> Paint Brush |
| <input type="checkbox"/> Tape Measure | |
| <input type="checkbox"/> Level | |

WARNING
PPE REQUIRED



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.




ULTRALITE Telescoping Gantry Crane



System Capacity Information:

The innovative design and heavy-duty construction of the PWI Gantry Crane will provide a superior quality product that will offer years of long-term value. The hoist weight allowance is 15% of the cranes capacity (for example, a crane rated for 6000 pounds allows for a 6000-pound live load plus 900 pounds for the weight of the hoist). There is also an allowance of 15% of the crane capacity for impact caused by hoist use. PWI systems will provide many years of dependable service by following the installation and maintenance procedures described herein.

Note: Any dimensions shown in this manual are for illustration purposes only. Refer to the drawings that were sent with your system for the exact measurements and configuration of the system we built for you.

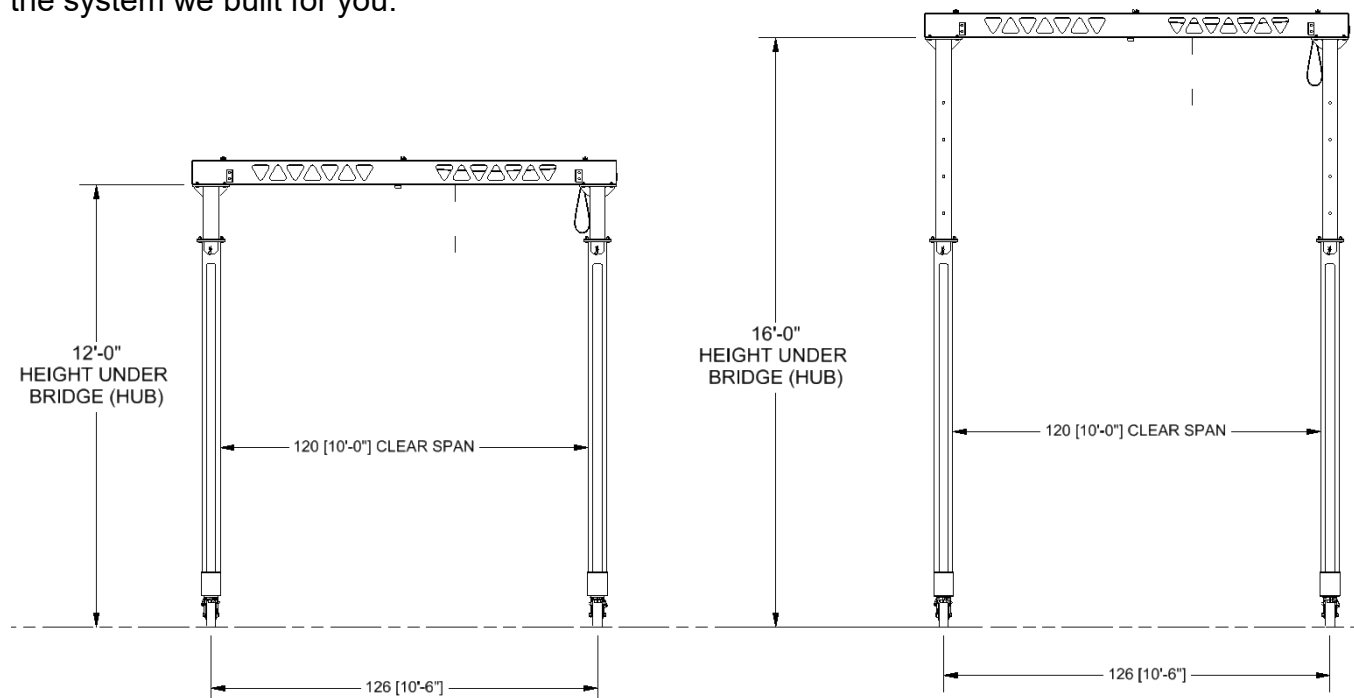

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane





Assembly

1. Lay out the parts of the PWI Manual Gantry Crane.



- | | |
|---------------------|------------------------------|
| (1) RH Leg Assembly | (1) Upper beam |
| (1) LH Leg Assembly | (2) Floor Brake (Optional) |
| (4) Casters | (1) Festoon Kit & Components |
| (1) Hardware Kit | |

2. Safely support the leg assemblies of the kit with blocking where shown and from a lifting device like a forklift with a suitable lifting strap.

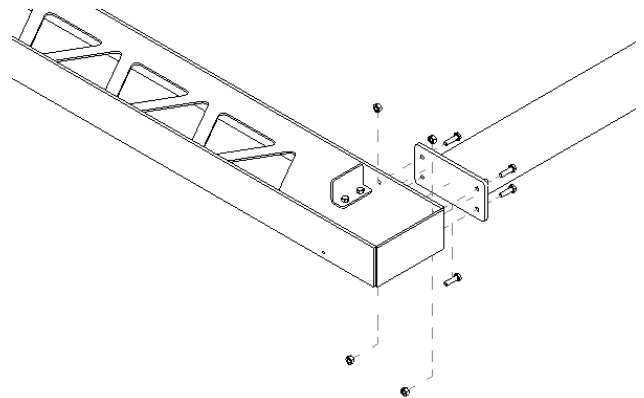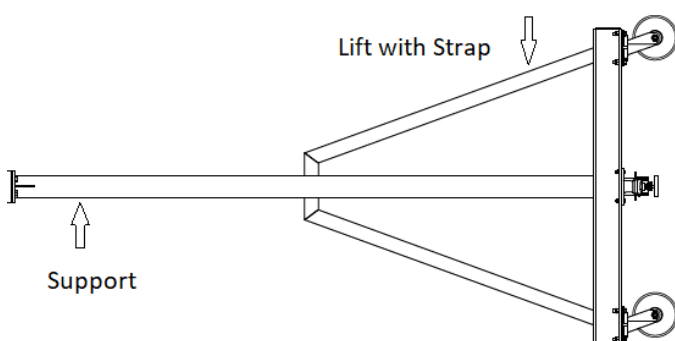

3. Once the legs are supported bring the upper beam over to the legs with a suitable lifting device like a forklift and bolt the beam to the leg assemblies using the hardware provided.


Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



4. Once your upper beam is bolted to the leg assemblies, if the sliding plate is still loose, bolt the sliding plate to the leg assembly using the hardware provided as shown and insert the clevis pin as shown.

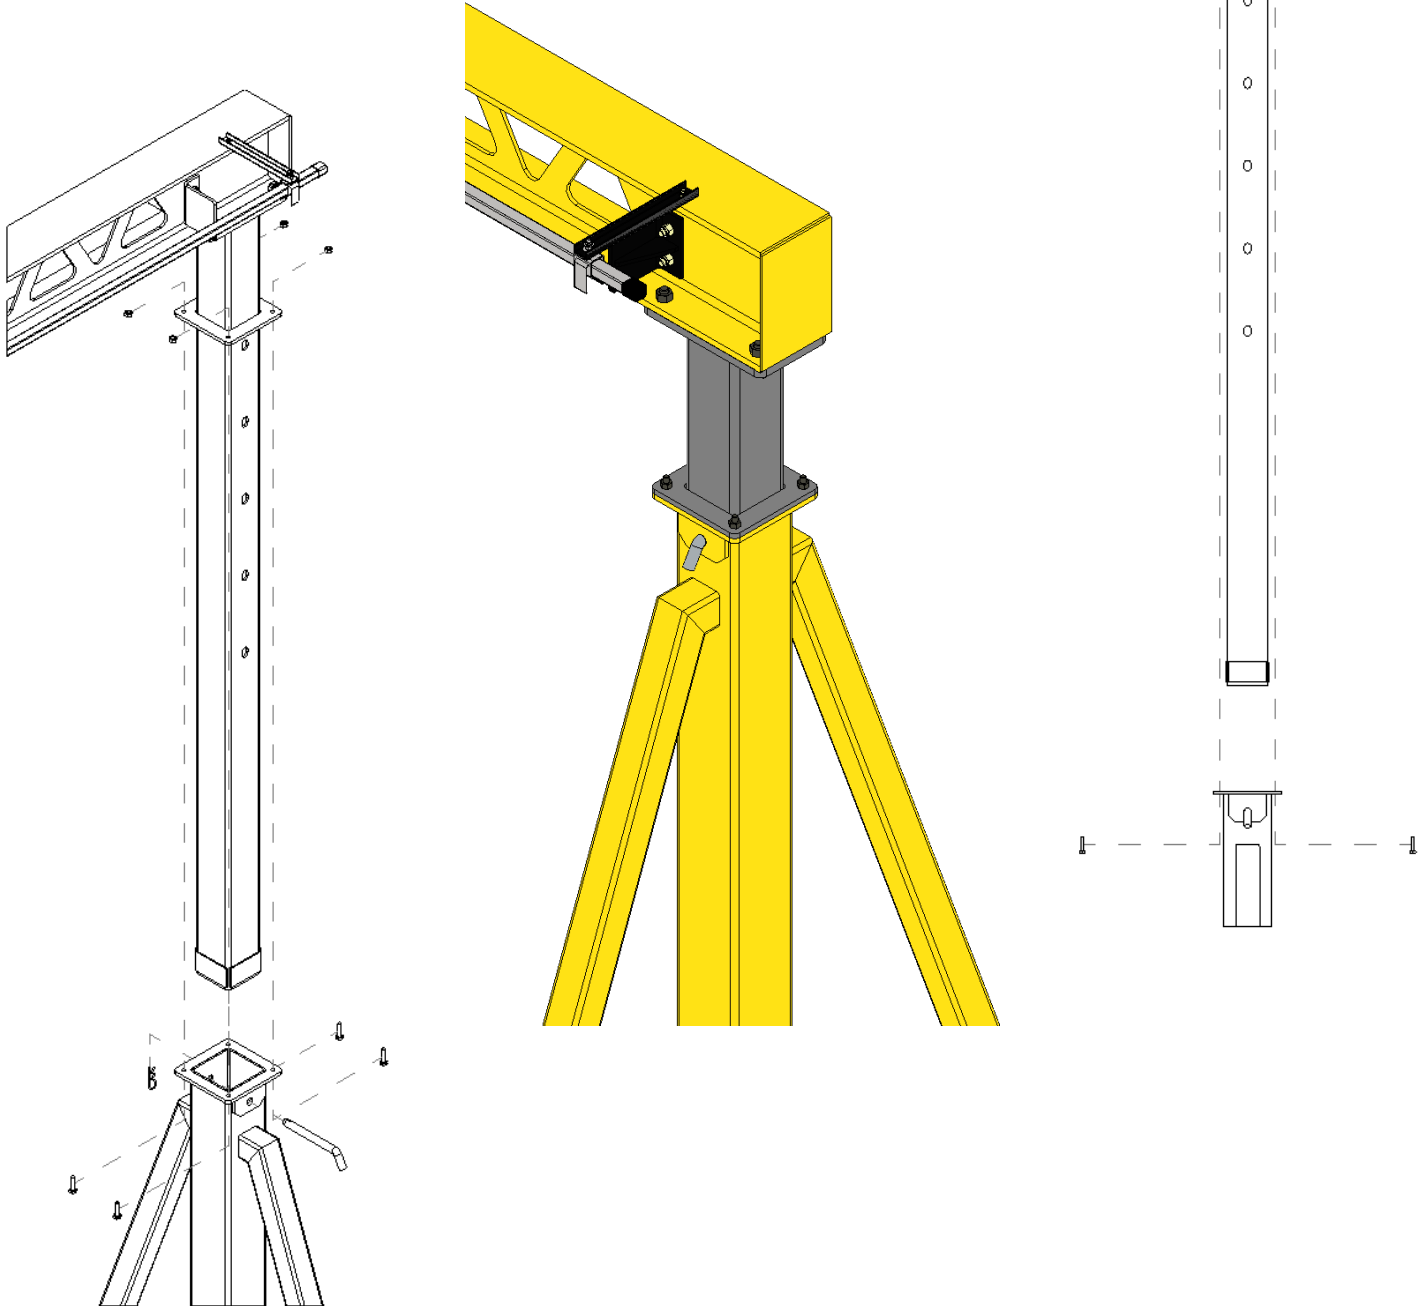


Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.




ULTRALITE Telescoping Gantry Crane



5. If floor locks are provided and unassembled, bolt the floor locks to the end trucks using the provided hardware as shown.

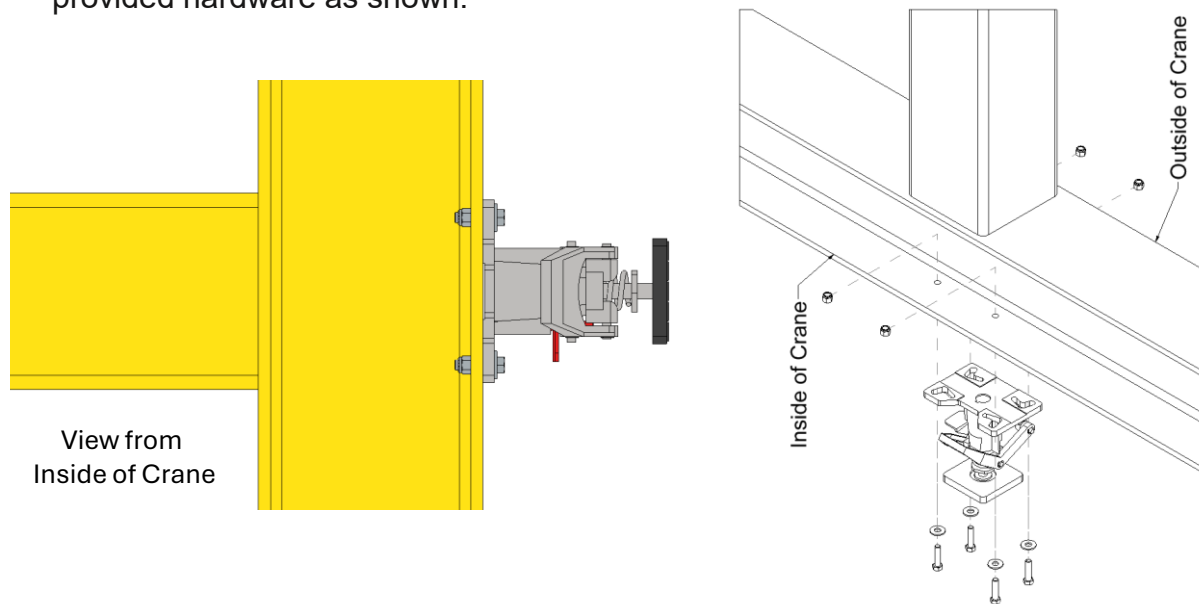

6. If casters are preassembled on your leg assemblies use caution to set the gantry in the upright position. Rolling casters can allow the gantry to move suddenly or the bottom of the gantry can roll away from the lifting device unexpectedly. Make sure, while lifting the gantry upper beam that the beam is chained or strapped to the forklift forks and forks are tipped back towards the forklift. If casters are not preassembled, bolt the casters to the end truck with the provided hardware as shown.

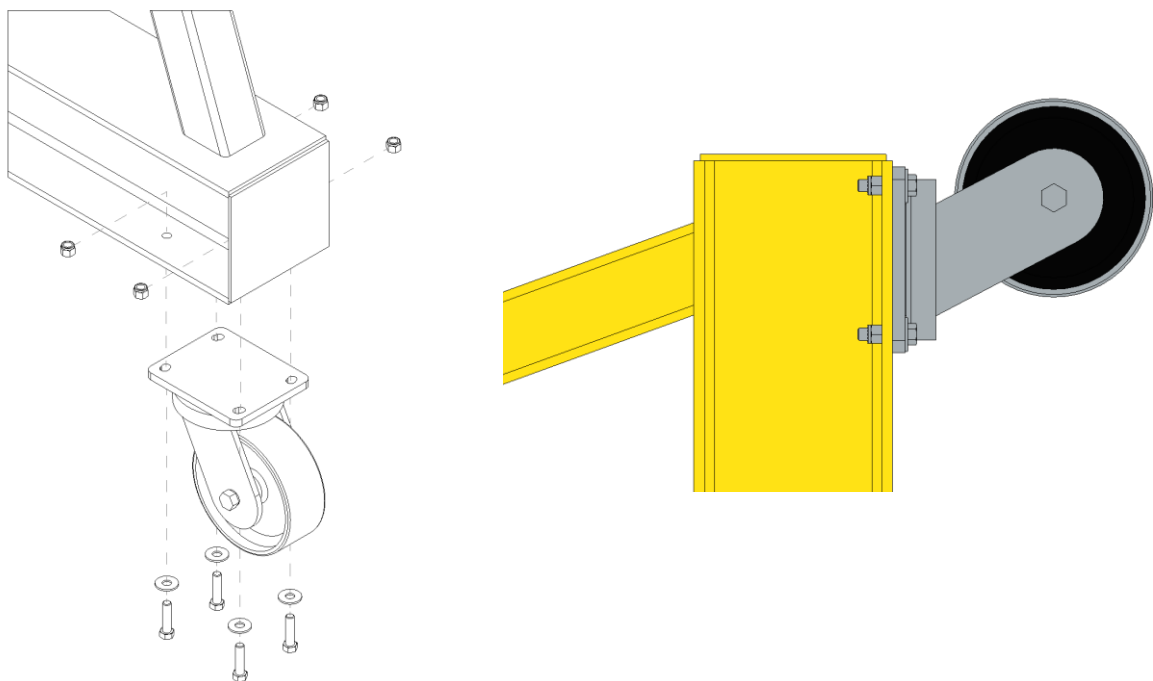

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



Install the trolley on your Gantry Crane

Please refer to trolley manufacturer's assembly instructions.



7. Loosely assemble your Trolley with the proper spacing for your beam.
8. Place your trolley on the gantry crane beam and tighten hardware.
9. Ensure lock nuts have been installed to prevent undesired loosening of hardware.

Hoist Electrification Installation on Your Gantry Crane

Standard electrification for the Gantry beam is 4 conductor festoon wire.

Install the **hoist** trolley onto the beam.

10. Holding a festoon trolley in your hand, loosen the wire clamp plate nuts on the festoon trolleys and then roll trolleys into festoon track.
11. Next, on the end of the **festoon track** that is closest to the **power source**, install the clamp type festoon wire hanger at that end of the track. (Image 2A)
12. Install festoon wires through festoon trolleys and festoon clamp. Making sure to have enough wire to make the connection to the power source, tighten festoon clamp. Position the rolling festoon trolleys every 60" along the **festoon wire** and tighten clamp plates. Be sure not to over tighten as this could damage the festoon wire.

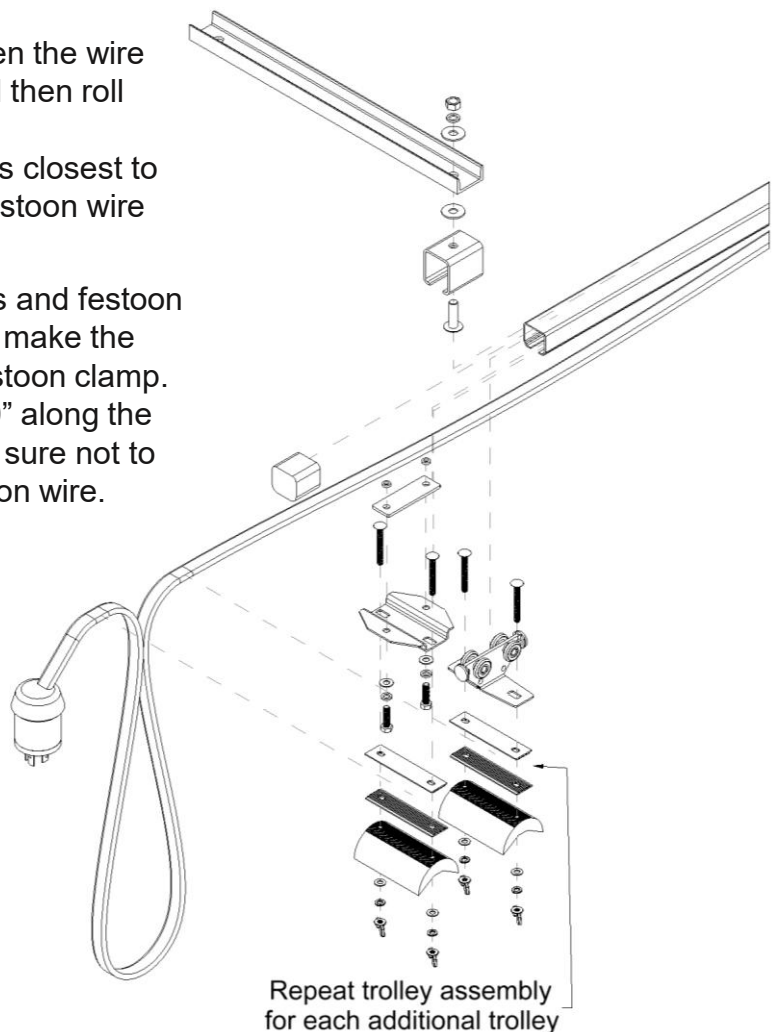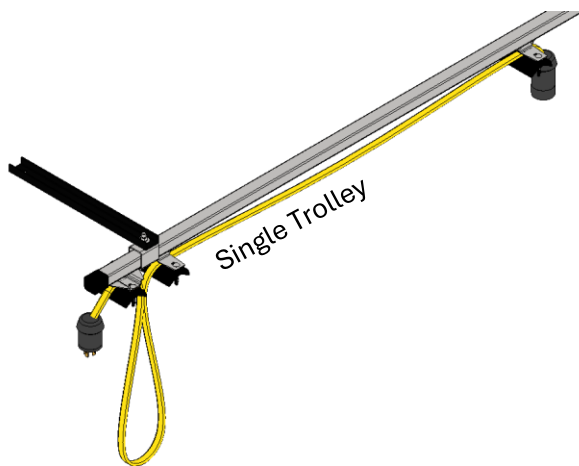

➡ **TIP:** Do not throw away this manual: the maintenance schedule is included. Keep Packing List, Installation Manual, General Arrangement Drawing, and any other inserts filed together in a safe place

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



TORQUE SPECIFICATIONS

The torque specifications for ASTM A325 Structural Bolts are defined by Table 2. The torque specifications for SAE Grade 5 Bolts are defined by Table 3. The torque specifications for SAE Grade 8 Bolts are defined by Table 4. These include standard and reduced values depending on the finish type and lubrication type.

ASTM A325 STRUCTURAL BOLTS									
Bolt Diameter	TPI	Tightening Torque Range (ft-lbs)							
		Plain		Plain, Light Oil		Plain, Heavy Oil		Galvanized, Waxed	
		Min	Max	Min	Max	Min	Max	Min	Max
1/2	13	100	117	80	94	60	70	50	58
5/8	11	198	240	158	192	119	144	99	120
3/4	10	350	425	280	340	210	255	175	213
7/8	9	569	685	455	548	341	411	284	343
1	8	850	1,017	680	814	510	610	425	508
1 1/8	7	1,200	1,444	960	1155	720	866	600	722
1 1/4	7	1,687	2,042	1350	1634	1012	1225	844	1,021
1 3/8	6	2,223	2,681	1778	2145	1334	1609	1,111	1,341
1 1/2	6	2,950	3,575	2360	2860	1770	2145	1,475	1,788

Table 2

SAE Grade 5				
Bolt Diameter	TPI	Tightening Torque Range (ft-lbs)		
		Min	Mid	Max
		Lubricated	Zinc, Dry	Plain Dry
1/4	20	6	7	8
5/16	18	13	14	17
3/8	16	23	26	31
7/16	14	37	42	49
1/2	13	57	64	75
5/8	11	82	92	109
3/4	10	113	128	150
7/8	9	200	227	267
1	8	322	365	429

Table 3

SAE Grade 8				
Bolt Diameter	TPI	Tightening Torque Range (ft-lbs)		
		Min	Mid	Max
		Lubricated	Yellow Zinc, Dry	Plain, Dry
1/4	20	9	10	12
5/16	18	18	21	24
3/8	16	33	37	44
7/16	14	52	59	70
1/2	13	80	90	106
5/8	11	159	180	212
3/4	10	282	320	376
7/8	9	455	515	606
1	8	681	772	909

Table 4

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



Crane Operator Instructions

PWI Overhead cranes and gantry crane generally handle materials over working areas where there are personnel. Therefore, it is important for the Crane Operator to be instructed in the use of the crane and to understand the severe consequences of careless operation.

It is not intended that these suggestions take precedence over existing plant safety rules and regulations or OSHA regulations. However, a thorough study of the following information should provide a better understanding of safe operation and afford a greater margin of safety for people and machinery on the plant floor. It must be recognized that these are suggestions for the Crane Operator's use. It is the responsibility of the owner to make personnel aware of all federal, state, and local rules and codes, and to make certain operators are properly trained.

Qualifications

Crane operation, to be safe and efficient, requires skill: the exercise of extreme care and good judgement, alertness and concentration, and rigid adherence to proven safety rules and practices as outlined in applicable and current ANSI and OSHA safety standards. In general practice, no person should be permitted to operate a crane:

- Who cannot speak the appropriate language or read and understand the printed instructions.
- Who is not of legal age to operate this type of equipment.
- Whose hearing or eyesight is impaired (unless suitably corrected with good depth perception).
- Who may be suffering from heart or other ailments which might interfere with the operator's safe performance.
- Unless the operator has carefully read and studied this operation manual.
- Unless the operator has been properly instructed.
- Unless the operator has demonstrated his instructions through practical operation.
- Unless the operator is familiar with hitching equipment and safe hitching equipment practices.

Handling the Trolley Motion

Before a load is handled, the hoist should be positioned directly over the load that is to be handled. When the slack is taken out of the slings, if the hoist is not directly over the load, bring it directly over the load before hoisting is continued. Failure to center the hoist over the load may cause the load to swing upon lifting. Always start the trolley motion slowly and reduce the trolley speed gradually.

Handling the Hoist Motion

Refer to the lifting (hoist) equipment's operating instructions.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



Safety Instructions for Raising/Lowering Telescoping Gantry Beam

Qualified Personnel Only: Only trained and authorized personnel should perform the adjustment of the telescoping gantry beam.

Clear the Area: Before raising or lowering the beam, ensure that the area around the gantry crane is clear of all personnel and obstructions.

Load Removal: Ensure that no load is suspended from the crane before adjusting the beam height.

Lifting Equipment Check: If lifting equipment is used during the adjustment process, inspect it for damage or wear before use. Make sure the lifting equipment has the capacity to handle the weight of the beam.

Stability: Ensure the gantry crane is on a stable, level surface before making any adjustments.


Controlled Movement: Lift Gantry beam to relieve pressure on Locking Pins. After removing pins, raise or lower the beam in a slow, controlled manner. Avoid sudden or jerky movements.

Clearance Awareness:

- Be aware of overhead obstructions and ensure there is sufficient clearance before raising the beam.
- A minimum clearance of 3" from any overhead obstruction is required.

Locking Mechanisms: Ensure locking pins or other securing devices are properly engaged after the beam has been adjusted to the desired height.


Inspection After Adjustment: After adjusting the beam height, inspect all connections and hardware to ensure they are secure.

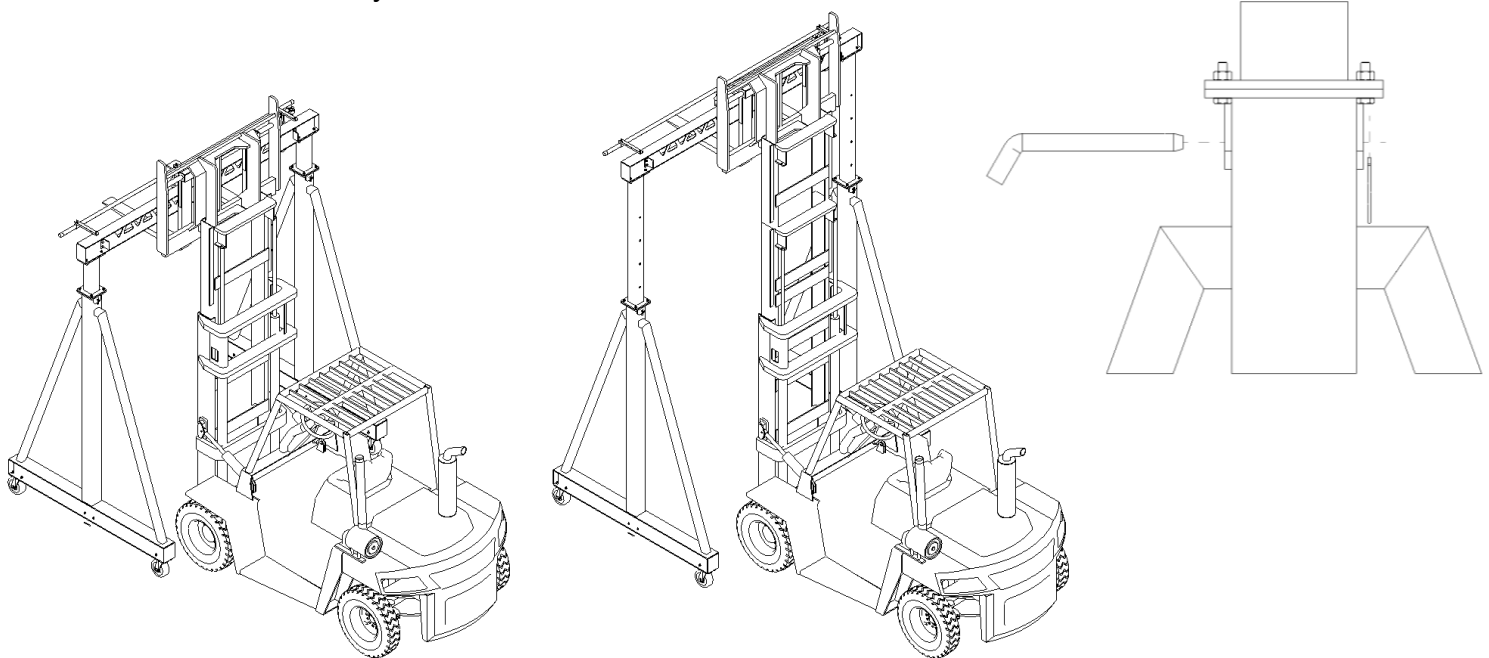

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane

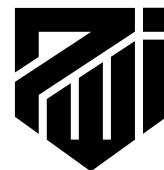

Safety Instructions for Raising/Lowering Telescoping Gantry Beam

Qualified Personnel Only: Only trained and authorized personnel should perform the adjustment of the telescoping gantry beam.


Clear the Area: Before raising or lowering the beam, ensure that the area around the gantry crane is clear of all personnel and obstructions.

Load Removal: Ensure that no load is suspended from the crane before adjusting the beam height.

Lifting Equipment Check: If lifting equipment is used during the adjustment process, inspect it for damage or wear before use. Make sure the lifting equipment has the capacity to handle the weight of the beam.

Stability: Ensure the gantry crane is on a stable, level surface before making any adjustments.

Controlled Movement: Lift Gantry beam to relieve pressure on Locking Pins. After removing pins, raise or lower the beam in a slow, controlled manner. Avoid sudden or jerky movements.

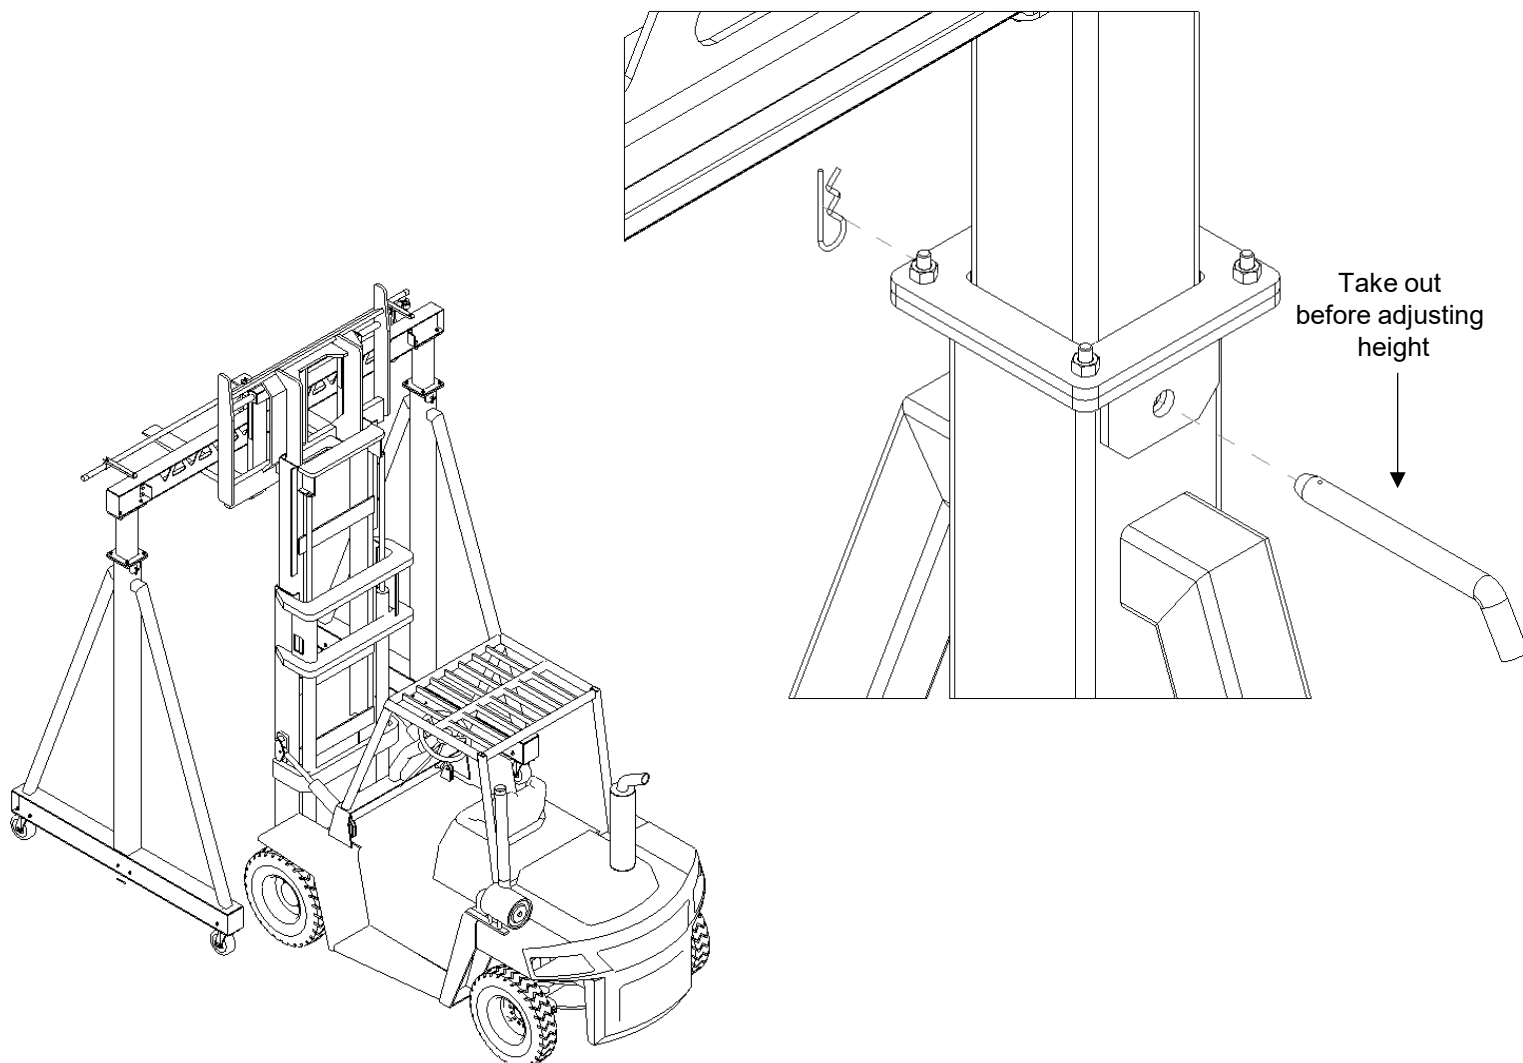

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane




Safety Instructions for Raising/Lowering Telescoping Gantry Beam

Clearance Awareness:

- Be aware of overhead obstructions and ensure there is sufficient clearance before raising the beam.
- A minimum clearance of 3" from any overhead obstruction is required.

Locking Mechanisms: Ensure locking pins or other securing devices are properly engaged after the beam has been adjusted to the desired height.

Inspection After Adjustment: After adjusting the beam height, inspect all connections and hardware to ensure they are secure.

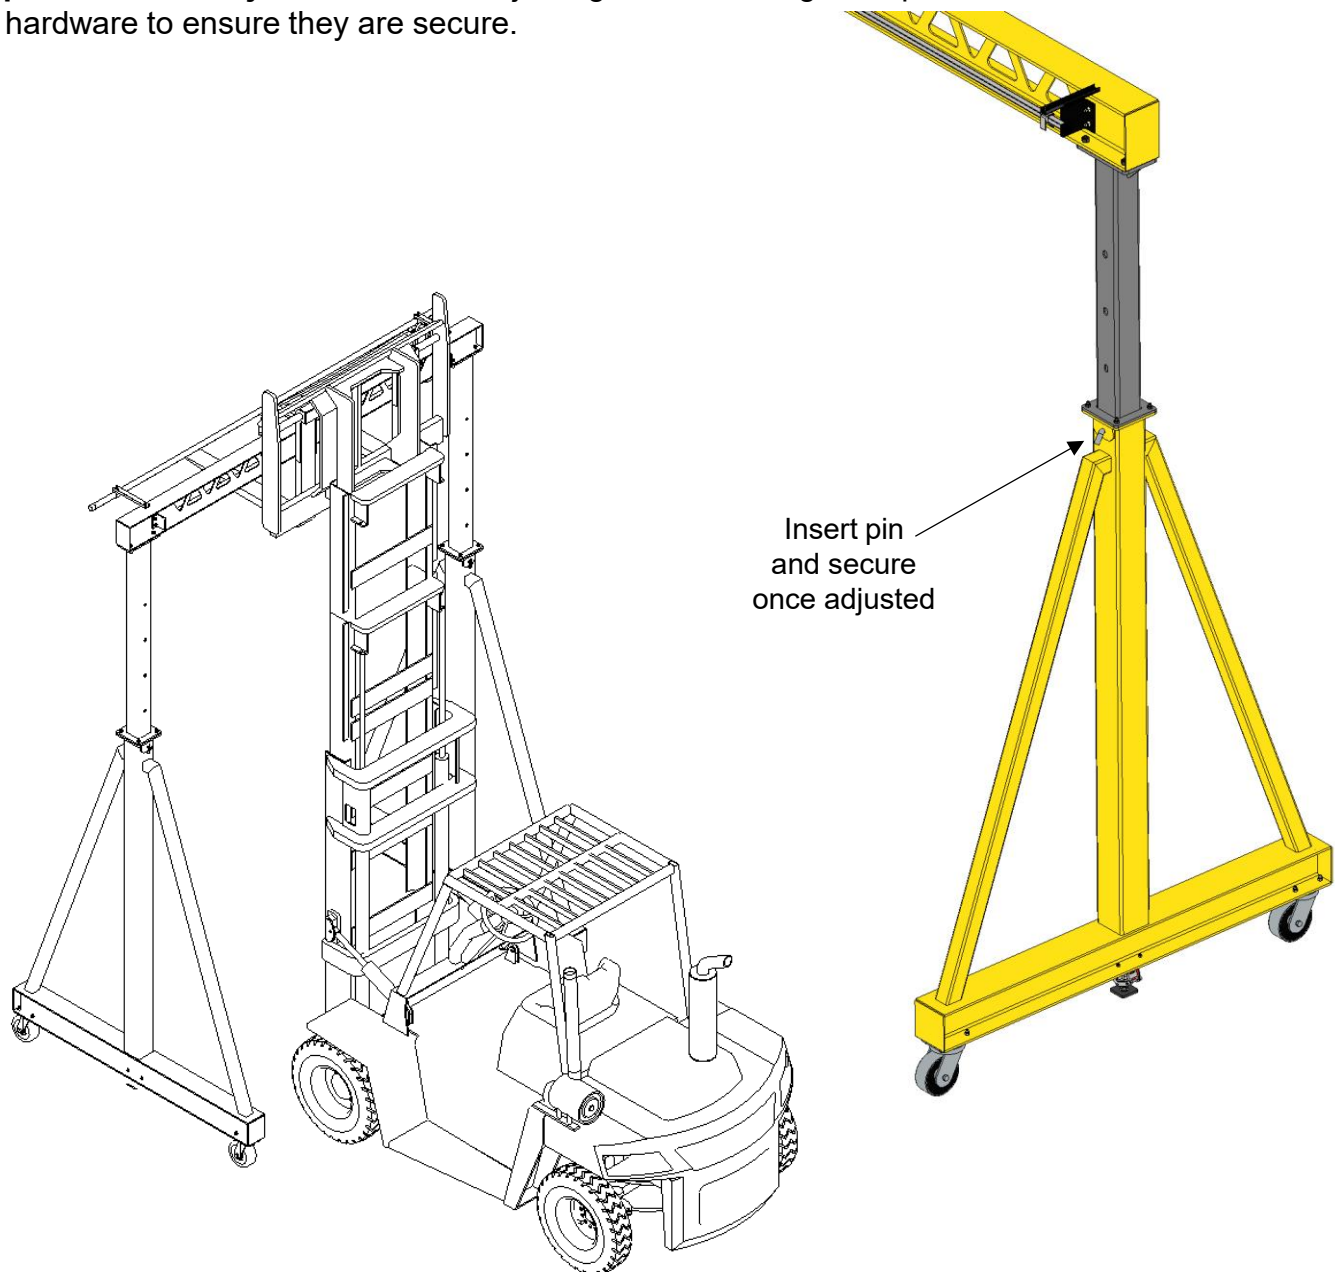

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



General Safety Suggestions

Know Your Crane

Crane operators should be familiar with the principal parts of a crane and have a thorough knowledge of crane control functions and movements. The crane operator should be required to know the location and proper operation of the main conductor disconnecting means for all power to the attachments on the crane.

Responsibility

Each crane operator should be held directly responsible for the safe operation of the crane.

Whenever there is any doubt as to SAFETY, the crane operator should stop the crane and refuse to handle loads until: (1) safety has been assured or (2) the operator has been ordered to proceed by the supervisor, who then assumes all responsibility for the SAFETY of the lift.

Do not permit **ANYONE** to ride on the hook or a load.

Daily Inspection

Test the crane movement and any attachments on the crane at the beginning of each shift.

Whenever the operator finds anything wrong or apparently wrong, the problem should be reported immediately to the proper supervisor and appropriate corrective action taken.

Operating Suggestions


One measure of a good crane operator is the smoothness of the crane operation. The good crane operator should know and follow these proven suggestions for safe, efficient crane handling.

1. The jib crane should be moved smoothly and gradually to avoid abrupt, jerky movements of the load. Slack must be removed from the sling and hoisting ropes before the load is lifted.
2. Center the crane over the load before starting the hoist to avoid swinging the load as the lift is started. Loads should not be swung by the crane to reach areas not under the crane.
3. Crane-hoisting ropes/chains should be kept vertical. Cranes shall not be used for side pulls.
4. Be sure everyone in the immediate area is clear of the load and aware that a load is being moved.
5. Do not make lifts beyond the rated load capacity of the crane, sling chains, rope slings, etc.
6. Make certain that before moving the load, load slings, load chains, or other lifting devices are fully seated in the saddle of the hook with hook latch closed (if equipped with hook latch).
7. Check to be sure that the load and/or bottom block is lifted high enough to clear all obstructions when moving boom or trolley.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane

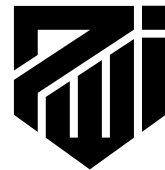

8. At no time should a load be left suspended from the crane unless the operator has the push button with the power on, and under this condition keep the load as close as possible to the floor to minimize the possibility of an injury if the load should drop. When the crane is holding a load, the crane operator should remain at the push button.
9. Do not lift loads with sling hooks hanging loose. If all sling hooks are not needed, they should be properly stored, or use a different sling.
10. All slings or cables should be removed from the crane hooks when not in use (dangling cables or hooks hung in sling rings can inadvertently snag other objects when the crane is moving).
11. Operators shall not carry loads and/or empty bottom blocks over personnel. Caution should be practiced when using magnet or vacuum devices. Loads, or parts of loads, held magnetically could drop. Failure of power to magnets or vacuum devices can result in dropping the load. Extra precaution should be exercised when handling molten metal in the proximity of personnel.
12. Whenever the operator leaves the crane, the following procedure should be followed:
 - Raise all hooks to an intermediate position.
 - Spot the crane at an approved designated location.
 - Place all controls in the “off” position.
 - Open the main switch to the “off” position.
 - Make visual check before leaving the crane.
13. In case of emergency or during inspection, repairing, cleaning or lubrication, a warning sign or signal should be displayed, and the main switch should be locked in the “off” position. This should be done whether the work is being done by the crane operator or by others.
14. Contact with rotation stops or trolley end stops shall be made with extreme caution. The operator should do so with particular care for the safety of persons below the crane, and only after making certain that any persons on the other cranes are aware of what is being done.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



ANY SAFETY FEATURES AND MECHANISMS BUILT IN OR OTHERWISE PROVIDED WITH THE CRANE BY PWI ARE REQUIRED FOR THE SAFE OPERATION OF THE CRANE. DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE OR OTHERWISE IMPAIR OR DISABLE THE PROPER FUNCTIONING OF ANY CRANE SAFETY MECHANISMS OR FEATURES BUILT-IN OR OTHERWISE PROVIDED BY PWI FOR SAFE OPERATION OF THE CRANE. ANY REMOVAL, IMPAIRMENT OR DISABLING OF ANY SUCH SAFETY MECHANISMS OR FEATURES OR OTHER USE OR OPERATION OF THE CRANE WITHOUT THE COMPLETE AND PROPER FUNCTIONING OF ANY SUCH SAFETY MECHANISMS OR FEATURES AUTOMATICALLY AND IMMEDIATELY VOIDS ANY AND ALL EXPRESS AND IMPLIED WARRANTIES OF ANY KIND OR NATURE.

Parts- Your system is custom designed for your space. The drawings that you received are specific to your system. PWI has copies of your drawings in a file under the company name or the name of the purchaser. If you require replacement parts, please call or email PWI and we will be glad to assist you in getting what you need.

574-646-2015

parts@pwiworks.com

LIMITED WARRANTY

STRUCTURAL: 3-Year (36 Month) Parts & Workmanship Warranty

Structural items include but are not limited to columns, headers, runways, and other stationary components of this PWI Ultra Lite System.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



GENERAL WARRANTY

This warranty will not apply to any product that has been repaired or altered outside of PWI manufacturing plant, or without specific instructions from PWI to make alterations. PWI will in no case, allow or offer reimbursement for outside sources to perform repairs or make alterations to product in reference. If the product has (in PWI's judgment), had alterations made which adversely affect its serviceability or was subject to misuse, negligence, accident, or operated contrary to instructions or common practice, warranty shall be considered void.

Defective items will be repaired or replaced and returned to PWI at the cost of the owner. If PWI, at its discretion, finds the warranty claims to be justifiable, PWI will compensate by means of replacing or repairing faulty products or components free of charge. The sole liability of PWI for warranty claims is limited to those here. In no event will PWI be liable for damages in excess of the original sale price of the defective product, or for any consequential damages, nor will PWI be liable for any special or other work done unless specifically agreed to in writing. This warranty does not include or apply to fire, natural disasters, or other Acts of God.

Should the warrantee destroy, intentionally or not, any part of the warranted product, or any evidence concerning the origin of an alleged defect, or try to conceal evidence of causation, this warranty is cancelled, and warrantee will have no claim against PWI whatsoever.

This warranty does not cover coatings on any PWI products including paint, powder-coat, zinc, or galvanized coatings. Coating life can vary greatly based on the ambient environment your PWI product is installed in, which is simply out of the manufacturer's control. Touch-up painting or coating repair (after initial installation by PWI or customer) shall be the responsibility of the owner, unless specifically guaranteed in writing on project quotation.

Any interpretation of this warranty shall be done in common pleas court in Indianapolis under Indiana law.

ALL OTHER REPRESENTATIONS, EXPRESS OR IMPLIED, WARRANTY, OR LIABILITY RELATING TO THE CONDITION OR USE OF THE PRODUCT ARE SPECIFICALLY, DISAVOWED, AND IN NO EVENT SHALL PWI BE LIABLE TO BUYER, OR ANY THIRD PARTY, FOR ANY DIRECT OR INDIRECT CONSEQUENTIAL OR INCIDENTAL DAMAGES



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



LIMITED WARRANTY

STRUCTURAL: 3-Year (36 Month) Parts & Workmanship Warranty

Structural items include but are not limited to columns, headers, runways, and other stationary components of this PWI jib crane.

Unless otherwise specified, PWI guarantees that the structure or this product is free from material defects in design, materials, and workmanship under normal use, proper maintenance, and service. A corrosive or abrasive atmosphere is not to be considered a normal atmosphere.

This warranty is strictly limited to 36 months for single shift operation or 6,000 hours after installation, or 38 months after shipment, whichever is shorter. Within ten days after defect is found, warrantee must deliver a written notice to PWI. All requested warranty information must be received promptly by PWI in no more than 5 business days.

MECHANICAL: 1 Year (12 Month) Parts & Workmanship Warranty

Mechanical items include but are not limited to all types of Overhead Cranes, and other non-stationary PWI products that are designed for specific functional operation.

Unless otherwise specified, PWI guarantees that this mechanical product is free from material defects in design and workmanship under normal use, proper maintenance, and service.

This warranty is strictly limited to 12 months for single shift operation or 2,000 hours after installation, or 14 months after shipment, whichever is shorter. Within ten days after defect is found, warrantee must deliver a written notice to PWI. All requested warranty information must be received promptly by PWI in no more than 5 business days.

All standard non-engineered products including but not limited to hoists, trolleys, wheels, gearmotors, controls, and safety products, will fall under the default warranty of that specific manufacturer.



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



PERIODIC INSPECTION AND LUBRICATION RECOMMENDATIONS

The following is a checklist to be followed in performing periodic inspections and preventative maintenance on PWI Crane Systems. It is intended that this checklist be supplemented with any additional instruction sheets and maintenance manuals sent with each job.

The frequency of inspection and lubrication recommendations presented herein is based upon normal operating conditions of one complete handling cycle every 10 minutes throughout a 40-hour week. If the actual duty cycle of a particular unit is greater or less than this, the inspections and lubrications should be performed more frequently or less frequently in proportion.

Each industry has conditions peculiar to it, which may cause wear of certain parts. The tabulation given is only general and may be supplemented by an individual maintenance department program to meet its own particular requirements. Particular attention should be given to corrosive conditions, excessive vibrations, extreme ambient temperature variations, and rough handling conditions.

Questions regarding damaged, worn or cracked equipment components should be directed to the PWI Inside Sales Department at 574-646-2015.

The recommendations contained herein are to be supplemented by any vendor instructions, which are included in this manual.

Power should be off and locked when performing maintenance.

Please check the state and local code manuals in your area to ensure compliance

Parts: Your system is custom designed for your space. The drawings that you received are specific to your system. PWI has copies of your drawings in a file under the company name or the name of the purchaser. If you require replacement parts, please call or email PWI and we will be glad to assist you in getting what you need. parts@pwiworks.com



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.





RUNWAYS & SUPPORT STEEL

COMPONENT	MAINTENANCE	FREQUENCY
Header-Column Hardware	Check for loose bolts & cracked fittings. Check for full compression of lock washer. Bolt should be tightened to manufacturer's specifications.	Every 1,000 hours or 6 months
Header-Runway Hardware	Check for loose bolts & cracked fittings. Check for full compression of lock washer. Bolt should be tightened to manufacturer's specifications.	Every 1,000 hours or 6 months
Column Anchoring	Check for loose bolts & cracked fittings.	Every 1,000 hours or 6 months
Sway Brace Connection (If used)	Check for loose bolts & cracked fittings.	Every 1,000 hours or 6 months
Runway	Check for runway wear or damage.	Every 2,000 hours or yearly
Joints	Check for loose or worn hardware or if welded type, for incipient cracks. Check for runway alignment and that wheel rolling surface is flush.	Every 2,000 hours or yearly
End Stops	Check for loose bolts and for incipient cracks.	Every 2,000 hours or yearly
Paint	Clean periodically and repaint where corrosion is present.	Every 2,000 hours or yearly



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



BRIDGE

COMPONENT	MAINTENANCE	FREQUENCY
Controls	Check for burned contacts, broken shading coils, worn or cracked arc barriers, auxiliary contacts, and proper seating.	Every 1,000 hours or 6 months
Push Buttons & Pendant	Check contacts. Tighten leads. Check for sticking buttons. Check ground wire continuity. Check pendant cable top and bottom for broken wires. Check strain chain to see that any pulling force is not put on pendant cables.	Every 1,000 hours or 6 months
Bridge Girder	Check Bridge Girder for wear or damage.	Every 2,000 hours or yearly
End Stops	Check for loose bolts and for incipient cracks.	Every 2,000 hours or yearly
Paint	Clean periodically and repaint where corrosion is present.	Every 2,000 hours or yearly

END TRUCK, & HOIST TROLLEY

COMPONENT	MAINTENANCE	FREQUENCY
Structural Frame & Load Bars	Check for incipient cracks in welds and castings. Check for loose bolts.	Every 2,000 hours or yearly
Suspension Point	Check for wear and loose or missing screws or pins.	Every 150 hours or 1 month
Wheels & Guide Rollers	Check for loose wheel bearings. Check wheels for proper contact and tracking on rail. Check wheel diameter for wear (Replace when 1/4" under original diameter). Check axle nuts for tightness.	Every 500 hours or 3 months



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.





FESTOON ELECTRIFICATION

COMPONENT	MAINTENANCE	FREQUENCY
Connections	Check connections to ensure no wires are worn and no conductors are exposed.	Every 150 hours or 1 month
Insulation	Check to ensure no damage is visible.	Every 2,000 hours or yearly
Complete System	In environments that are subject to considerable buildup of dust, especially conductive dust, remove this dust by brushing.	Every 2,000 hours or yearly

STARKE ELECTROTRACK

COMPONENT	MAINTENANCE	FREQUENCY
Rail	Check for corrosion, bowing, or sagging. Check alignment at moving gaps. Realign if necessary.	Every 2,000 hours or yearly
Couplings	Check bolt or screw tightness. Check for corroded contact surfaces.	Every 2,000 hours or yearly
Supports	Check for loose bolts and/or screws and bent brackets.	Every 2,000 hours or yearly
Insulators	Check for loose bolts, sheared support ears, current carrying deposits on surface.	Every 2,000 hours or yearly
Rail Covering	Check for accidental abrasion and peeled covering.	Every 2,000 hours or yearly
Current Taps	Check bolt and terminal screw tightness. Check for corroded contact surface.	Every 2,000 hours or yearly
Ground	Check for ground continuity. Check at load side of disconnect switch (current off), with meg-ohm tester, for overall system insulation resistance.	Every 2,000 hours or yearly
Collectors	Check for worn shoes. Check flexible leads from wheel clevis pigtail or slide shoe shaft. Check tightness of lead connections. Check for cracked insulators. Replace if necessary.	Every 750 hours or 4 months

HOIST (Refer to Hoist Manufacturer)



Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.



ULTRALITE Telescoping Gantry Crane



Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Product specifications and dimensions are approximate and for informational purposes only. Variations may occur due to design or manufacturing adjustments. For exact measurements, please confirm with our customer service before ordering. PWI reserves the right to modify specifications without notice.

